

Section II - Preparation For Use

Uncrating instructions

1. Cut bands securing the carton to the skid.
2. Cut the bottom of the cardboard carton where it is secured to skid.
3. Carefully raise and remove the carton from the tying machine.
4. Carefully remove the steel strapping from the machine and then pull the tying machine away from the skid.
5. Remove the box in the twine container shipped with the tying machine containing four casters.
7. Using the casters shipped with the tying machine, insert a caster into the caster socket on each leg of the tying machine.

Note: The manual should be wrapped around the knotter at standard, along with the warranty card, certificate and spare knives. If any problems are encountered, contact your local B. H. Bunn Company Distributor.

Power requirements

The single-phase, 1/4 hp, 1725 rpm standard motor provided with your tying machine requires an external power source of 115 volts at 60 cycles. A standard three-prong electrical cord is provided with electric motor. If a three-prong receptacle is not available at the installation site, a three-prong adapter should be used with the electrical cord.

Tying Materials

The tying machine is adaptable to a wide range of tying materials ranging from natural fiber twines to synthetics which can replace wire and strapping in many applications. Be sure the twine or tape used is the proper type and size for the application and your Bunn machine. Each new or factory reconditioned Bunn Tying Machine is factory adjusted and set for a particular size and type of twine. Other sizes or types will require adjustments and may require internal part changes. The right Bunn Twine, tested and approved for Bunn Tying Machines, aids in maximum machine performance. Bunn Twine is of uniform size and strength, free of irregularities that cause mis-ties. It is strong and fray-resistant, with minimum linting characteristics.

A free sample folder showing actual twine samples and specifications is available through your local B. H. Bunn Company Distributor.

Conversion kits are available through your local B. H. Bunn Company Distributor when and if it ever becomes necessary to change to a different material – twine to tape or tape to twine. The twine container