


MAIN TABLE SUPPORT AND KICKOUT ASSEMBLY

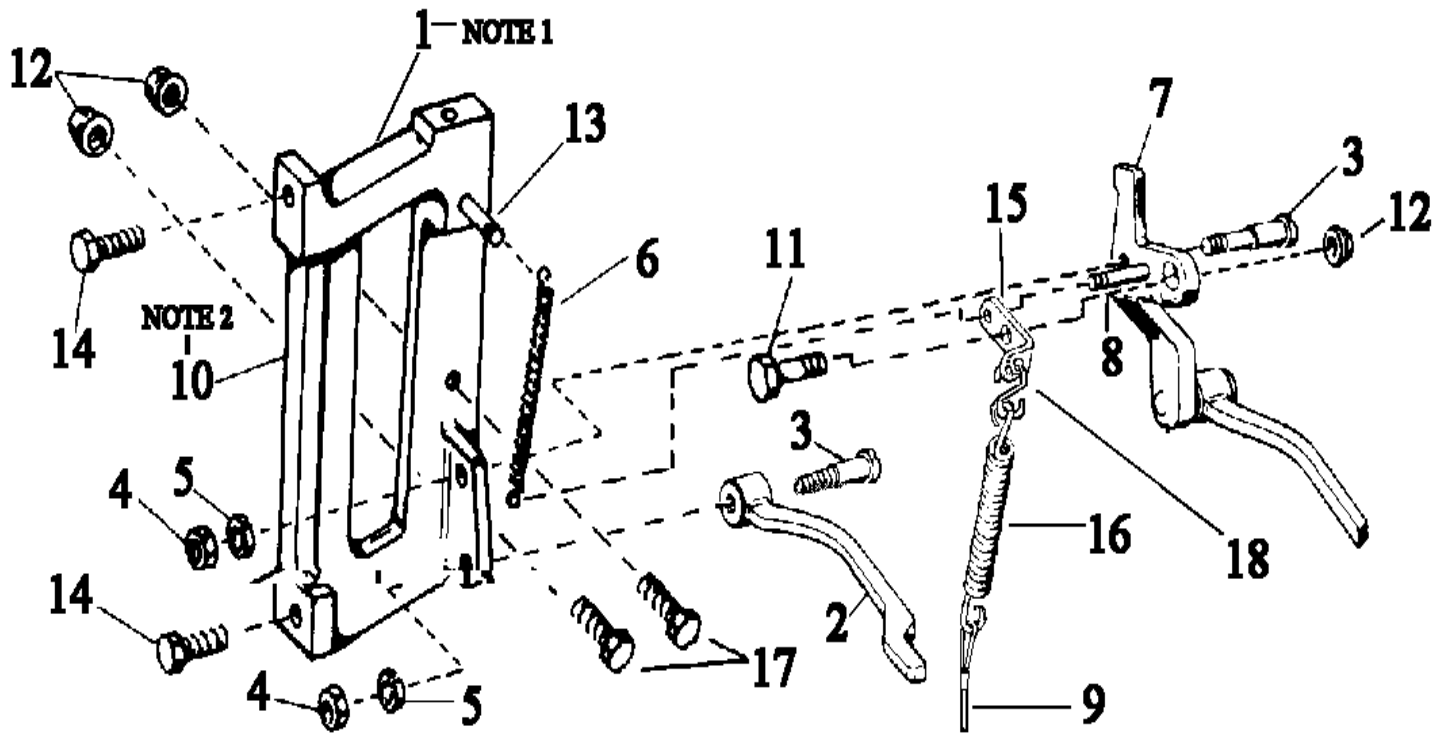

Use serial number when ordering all replacement parts.

Index	Part	Qty	Index	Part	Qty
1	084014 Main Table Support and Kickout Assembly	1	10	084048 Main Table Support Sub Assembly	1
2	032018 Lever, Clutch Kickout	1	11	100450 Screw, Hex Head 1/4-20 X 1	1
3	100005 Screw, Trip	2	12	100286 Nut, flanged Hex Head 1/4-20	3
4	100151 Nut, Hex Head 1/4 - 28	2	13	100503 Pin, Groove 3/16 x 1 1/2	1
5	100135 Washer, Split Lock	2	14*	100273 Screw, Hex Head 5/16-18 X 5/8 "Whiz Loc"	2
6	074054 Spring, Trip Return	1	15	011034 Trip Extension	1
7	011007 Bell Crank and Kickout Wedge Assembly	1	16*	074050 Spring, Trip Cable	1
8	100158 Pin, Groove 3/16 X 1	1	17	100238 Screw, Hex Head 1/4-20 X 1 1/4	2
9*	011022 Cable, Clutch Trip	1	18*	100690 S-Hook	1

* Not part of assembly. Order separately

Note 1: Includes item 13. Note 2: Includes items 12, 13 & 17