

Maintenance Manual & Parts Catalog

BUNN **PACKAGE TYING** MACHINES

Table of Contents	Page
How to identify the main assemblies.....	1
Threading instructions.....	2
Correct operating procedure.....	3
One way wraps.....	3
Cross ties.....	3
How to avoid problems.....	4
How to:	
replace drive belt.....	4
replace stripper spring.....	4
replace the stripper.....	4
replace the knotter.....	5
correct clutch slipping.....	5
clean the clutch.....	5
correct automatic tripping.....	5
The knot tells the story.....	6 & 7
Complete list of parts.....	8, 9, 10, 11 & 12
Exploded views and parts listings:	
Knotter head assembly.....	7 & 12
Main table assembly.....	13
Main table assembly, post office.....	13
Main table assembly, clamp model.....	13
Stringholder assembly.....	7 & 14
Cum wheel, clutch & chain gear assemblies.....	15
Double clutch assembly.....	15
Post Office pressure trip.....	15
Twine arm assembly.....	16
Base parts.....	17
Illustrations and model numbers of other Bunn machines.....	18



Note:

When ordering parts, please give the serial number of your Bunn Tying Machine. You will find it on the name plate on the right side panel of the machine.