

Part No.	Description	Illustrated on Page Number	Part No.	Description	Illustrated on Page Number
85P2	Pin—15T. sprocket, twine arm		○ 110P	Disc—fibre	
85P3	Pin—12T. sprocket, twine arm		110PR	Disc—foam plastic	
85Q	Pin-taper—twine arm transfer gear		○ 110T	Screw—can mounting	
85R	Race-needle bearing—1" long		□ 111	Pad—straight yoke	
85S	Spacer—twine arm stem— $\frac{3}{4}$ " long		□ 111N	Nut—straight yoke pad	
85TB-A	Bearing-needle— $\frac{1}{2}$ " long		□ 111S	Screw—straight yoke pad	
85TB-B	Bearing-needle—1" long		112	Lever—clutch block kickout, large (replacement-old style)	
85TB-S	Spacer-bearing—1 $\frac{1}{4}$ " long		○ 112A	Lever—clutch block kickout, small	15
☆ 85U	Bearing-ball—T. A. pivot		○ 112W	Wedge—kickout lever	15
☆ 85V	Housing—ball bearing		○ 112WS	Stud—kickout lever wedge	15
85W	Washer-thrust, T.A. stem		115A	Screw—tension booster adjusting	
☆ 85X	Flag-T.A. back gear		115TB-B	Bracket—tension booster	
☆ 85XS	Screw—flag mounting		115TB-R	Rocker arm—tension booster	
90A	Caster—2 $\frac{1}{2}$ " plastic, regular	17	115G	Guard—tension booster	
90H	Caster—3" plastic, lock		115H	Screw—tension booster guard	
○ 90J	Caster—3" plastic, regular		115S	Screw—tension booster bracket mounting	
○ 90S	Sleeve—caster	17	115T	Screw—tension booster rocker pivot	
○ 91A	Nut—knurled tension—small	17	115U	Nut—tension booster rocker pivot screw	
91B	Nut—knurled tension—large (used on tension booster only)		115V	Spring—compression, tension booster	
○ 92	Spring—tension	17	115W	Plunger—compression spring, tension booster	
○ 92Q	Stud—tension spring		○ A116	Running tension assembly	
○ 92R	Screw—tension spring		○ 117	Screw—assembly mounting	17
○ 93G	Guard—running tension		118C	Collar-T.B. plunger	
93M	Bracket—large tension holder	17	118P	Plunger-tension—booster	
93S	Screw—bracket mounting		118S	Screw-set—T.B. plunger collar	
○ A94	Lever assembly—pressure trip	15	119	Guide—T.B.	
○ 94L	Lever-trip—model 'L'		119A	Stud—T.B. spring	
□ 94M	Lever-trip—model 'M'	17	119B	Spring—tension booster	
□ 94U	Bracket—'U' trip support		119C	Stud—T.B. spring rocker	
□ 94UI	Treadle—'U' trip		119N	Nut-T.B. guide lock	
94N	Washer-trip lever pivot	17	120	Cam—tension booster	
94P	Screw-trip lever pivot	17	121	Screw—T.B. cam	
○ 94PS	Spring—pressure trip	15	122	Pin—T.B. cam	
○ 94Q	Stud—pressure trip spring		□ 123C	Chain-roller	17
○ 94S	Screw—pressure trip bearing	13—15	□ A123SA	Chain gear assembly	15
○ 94T	Bearing—pressure trip	13—15	○ 123SA	Shoe—small radius, chain gear	15
○ 94TP	Pin—bearing locating		123SB	Shoe—large radius, chain gear (roll towel & 10" models only)	
○ 94V	Collar-P.T. pivot stud	15	○ 123R	Rivet—chain gear shoe	
○ 94W	Screw-set—collar		123D2	Stud—chain gear, 2W	15
96	Spring—straight hook pressure		○ 123D3	Stud—chain gear, 3W	
A103-6	Drawback lever assembly—6"		☆ 123D2BG	Stud—chain gear, 2W back gear	
○ A103-8 $\frac{1}{2}$	Drawback lever assembly—8 $\frac{1}{2}$ "	16	☆ 123D3BG	Stud—chain gear, 3W back gear	
A103-10	Drawback lever assembly—10"		123MR-BG	Stud—chain gear, meat roll	
A103-12	Drawback lever assembly—12"		○ 123E	Screw-set, chain gear stud	17
103R	Rivet—drawback pivot arm		□ 124-10	Shield—10" machine	
103S	Screw-set—drawback	16	○ 124-16	Shield—16" machine	17
○ 104L	Spring—light drawback (up to 16")	16	□ 124-18	Shield—18" machine	
104M	Spring—medium drawback (18" model & above)		□ 124-20	Shield—20" machine	
105	Clip—drawback spring	16	□ 124-23	Shield—23" machine	
106N	Screw—drawback	16	□ 124-26	Shield—26" machine	
○ 110	Twine can—regular	17	○ 124S	Screw—shield mounting	17
110JO	Twine can—jumbo, outside mounting		□ 125	Brake—casting	17
110JU	Twine can—jumbo, under machine mounting		□ A125	Brake assembly	
○ 110CL	Cone—wooden, large		□ A125PO	Brake pad assembly	17
110CS	Cone—wooden, small				
○ 110D	Screw—cone mounting				

○ Used in post office models, too. Order may be written with "P.O." appended to part number.

□ Must order with machine serial number. △ Specify twine size used. ☆ Used with backgeared models.