


Part No.	Description	Illustrated on Page Number
□ 125A	Rod—brake adjusting.....	17
○ 125APO	Rod—brake adjusting	
○ 125BL	Nut—brake adjusting rod.....	17
○ 125WL	Washer—brake adjusting rod.....	17
○ 125P	Pivot—brake.....	17
○ 125Q	Pin—brake pivot cotter.....	17
○ 126	Plate—motor.....	17
□ 126A	Bracket—motor plate.....	17
○ 126N	Nut—bracket screw	
○ 126R	Riser—motor plate.....	17
○ 126S	Screw—frame.....	17
□ 127	Standard—knotter	
○ 127S	Screw—knotter standard.....	17
○ 128	Loop—jumbo twine can	
○ 128A	Loop—regular twine can.....	17
○ 128AS	Screw—loop mounting.....	17
○ 129A	Cord set—regular, 8 ft. with switch.....	17
○ 129B	Cord set—grounded, 8 ft. with switch	
○ 129C	Cord set—3 phase, 8 ft. with switch	
○ 129DB	Cord set—post office, 12 ft. with switch & pilot light	
○ 129DBL	Light—pilot	
○ 129F	Switch toggle	
○ 129S	Screw—switch mounting.....	17
○ 130	Motor—electric (give information from motor specification plate).....	17
○ 132E10	Guard—expanded metal, 10' machine	
○ 132E16	Guard—expanded metal, 16' machine.....	17
□ ○ 132E16PO	Guard—expanded metal	
□ 132E18	Guard—expanded metal, 18' machine	
□ 132E20	Guard—expanded metal, 20' machine	
□ 132E23	Guard—expanded metal, 23' machine	
□ 132S18	Guard—strap metal, 18' machine	
□ 132S20	Guard—strap metal, 20' machine	
□ 132S23	Guard—strap metal, 23' machine	
□ 132S34	Guard—strap metal, 34' machine	
□ 132S10MR	Guard—strap metal, 10' meat roll machine	
□ 132S16MR	Guard—strap metal, 16' meat roll machine	
□ 132E8	Guard—expanded metal, 8' roll towel machine	

A17L—Knotter Head Assembly

Light (10 ply and below)

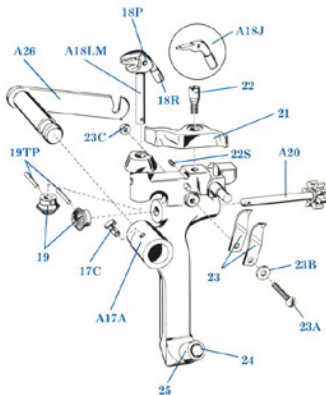

- A17A Knotter head sub-assembly
- 17C Oil cup
- △ A18J Knotter-jaw assembly
- △ A18LM Knotter body assembly—
light, with miter gear
- 18P Pin-knotter jaw
- 18R Roller-knotter jaw
- 19 Gear-miter knotter
- 19TP Pin-taper, knotter miter gear
- A20 Star wheel assembly,
with miter gear
- 21 Lever-knotter
- 22 Screw—knotter lever
- 22S Screw-set, knotter lever screw
- 23 Spring—knotter flat
- 23A Screw-knotter flat spring
- 23B Washer—knotter flat spring
- 23C Nut—knotter flat spring
- 24 Stud—knotter head roller
- 25 Roller—knotter head
- A26 Pivot assembly—knotter head

○ Used in post office models, too. Order may be written with "P.O." appended to part number.

□ Must order with machine serial number. △ Specify twine size used. ☆ Used with backgeared models.