


Twine Arm Assemblies

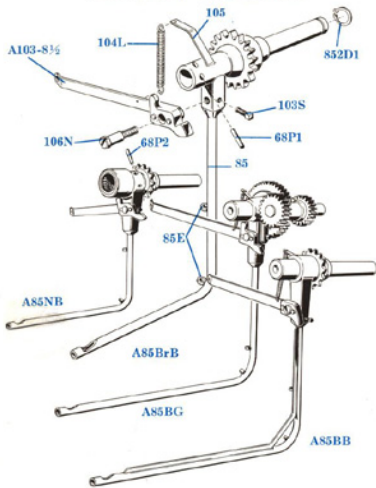

- 68P1 Pin—loose table retaining, for 3/4" dia. stud
- 68P2 Pin—loose table retaining, for 3/4" dia. stud
- A85BB Twine arm assembly—ball bearing
- ☆ A85BG Twine arm assembly—back geared
- ○ A85BrB Twine arm assembly—bronze bearing
- A85NB Twine arm assembly—needle bearing
- 85 Twine arm
- 852D1 Ring—retaining
- 85E Eye—twine guide
- 103S Screw-set—drawback
- A103-8 1/2 Drawback lever assembly—8 1/2"
- 104L Spring—light drawback (up to 16")
- 105 Clip—drawback spring
- 106N Screw—drawback

Base Parts

- ○ 1 Frame—left end (tent)
- 2 Frame—front end (square)
- ○ 3 Frame—near side, long
- ○ 4 Frame—far side, long
- 5L Base—left side, long, regular
- 5R Base—right side, long, regular
- 5LPO Base—left side, long
- 5RPO Base—right side, long
- 5DL Base—left side, low
- 5DR Base—right side, low
- 5UL Base—left side, high
- 5UR Base—right side, high
- 5TL Base—left side, tilted
- 5TR Base—right side, tilted
- 5SS Screw—socket set, base
- 6A Nut-base tie-rod
- ○ 6 Tie-rod-base (specify length measure shoulder to shoulder)
- 6E Screw—hex. hd. cap
- 7 Trough—split type
- ○ 7A Bracket—trough, front
- 7B Bracket
- 7N Nut—bracket screw
- 7S Screw—bracket
- A8 Main table assembly, regular
- 8R Screw—hex. hd., main table mtg.
- 8S Screw—fil. hd., main table mtg.
- 17C Oil cup
- 26A Screw—pivot assembly lock
- 26B Washer—pivot assembly lock screw
- 62 Rod-trip
- 62N Nut-trip rod
- 62W Washer-trip rod
- A68 Loose table assembly
- 68P1 Pin—loose table retaining, for 3/4" diam. stud
- ○ 75A 'V' Belt
- 75S Pinions—motor
- 75SS Screw—set, motor sheave
- ○ A85BrB Twine arm assembly—bronze bearing
- 90A Caster—2 1/2" plastic, regular
- 90S Sleeve—caster
- 91A Nut-Knurled tension—small
- 92 Spring—tension
- 93M Bracket—large tension holder
- 94M Lever-trip, model 'M'
- 94N Washer-trip lever pivot
- 94P Screw-trip lever pivot
- 110 Twine can—regular
- 117 Screw—assembly mounting
- ○ 123C Chain-roller
- 123E Screw-set, chain gear stud
- ○ 124-16 Shield—16" machine

16

○ Used in post office models, too. Order may be written with "P.O." appended to part number.

□ Must order with machine serial number. △ Specify twine size used. ‡ Used with backgeared models.