


MAIN TABLE SUPPORT AND KICKOUT ASSEMBLY

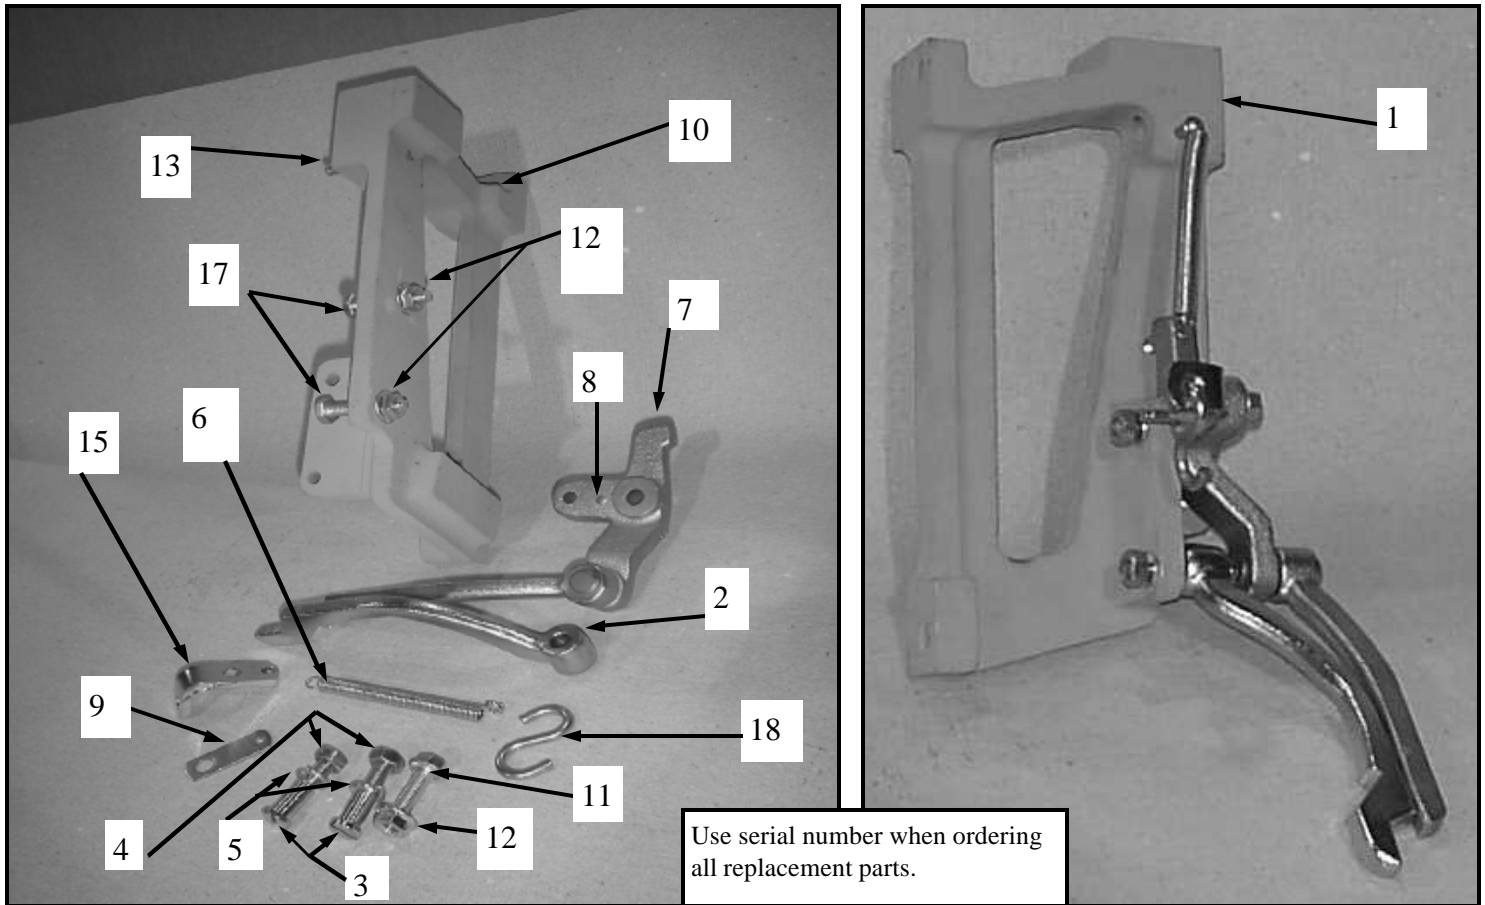

Index	Part	Qty	Index	Part	Qty
1	084071 Main Table Support and Kickout Assembly	1	10**	084054 Main Table Support Sub Assembly	1
2	032081 Lever, Clutch Kickout	1	11	100450 Screw, Hex Head 1/4-20 X 1	1
3	100078 Screw, Trip	2	12	100286 Nut, Flanged Hex Head 1/4-20	3
4	100151 Nut, Hex Head 1/4 - 28	2	13	100503 Pin, Groove 3/16 x 1 1/2	1
5	100135 Washer, Split Lock	2	14*	100273 Screw, Hex Head 5/16-18 X 5/8 -(not shown)	2
6	074055 Spring, Trip Return	2	15	011034 Trip Extension	1
7	011019 Bell Crank and Kickout Wedge Assembly	1	16*	074050 Spring, Trip Cable - (not shown)	1
8	100158 Pin, Groove 3/16 X 1	1	17	100238 Screw, Hex Head 1/4-20 X 1 1/4	2
9	030016 Anchor spring	1	18	100690 S-Hook	1

* Not part of assembly. Item 14 are the Mounting Bolts. Order separately

** Includes items 12, 13 and 17