



# Main Shaft Assembly, Main Gear

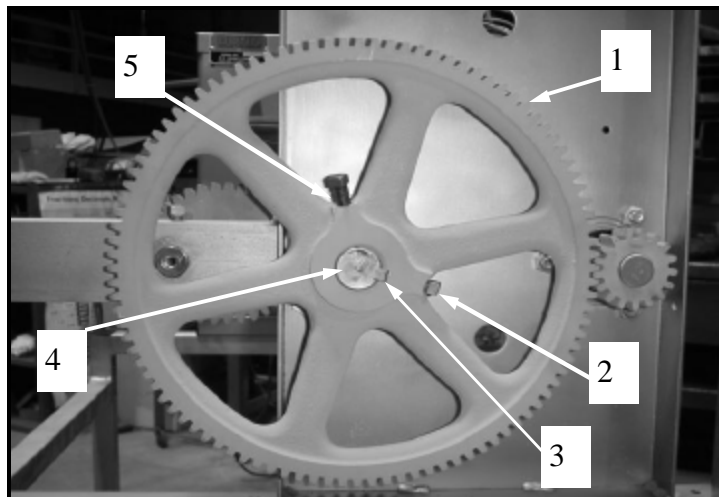

Rear View

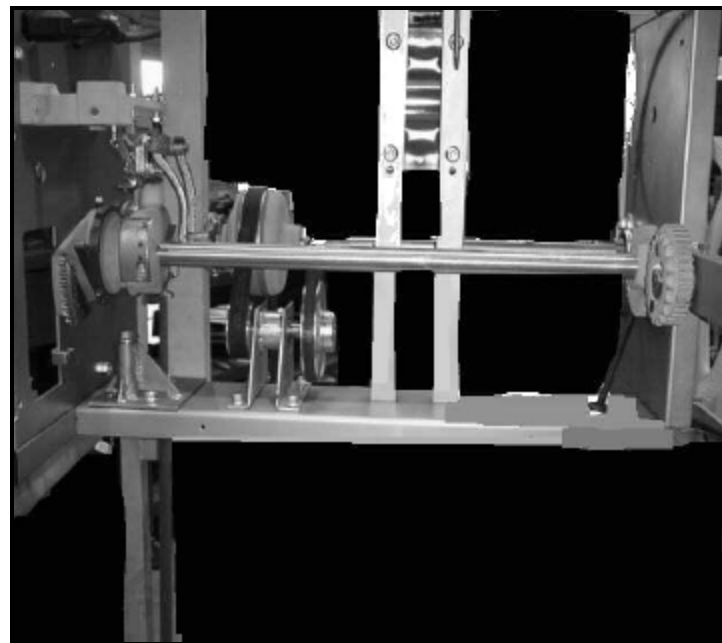

Assembly View  
Main Cam, Main Elliptical

Use serial number when ordering all replacement parts.

Index Number	Part Number	Description	Qty Req	Index Number	Part Number	Description	Qty Req
1	020217	Gear, Main	1	*	013090	Bearing and Collar	2
2	100339	Screw, 5/16 Sq. HD Knurled Cup Point	1	*	013092	Bearing, Flangette	4
3	083090	Key, Main Gear	1				
4	012161	Shaft, Main	1				
5	100128	Screw, 5/16 Sq. HD Knurled Cup Point	1				

\* Not shown in this assembly. Needed for final assembly.