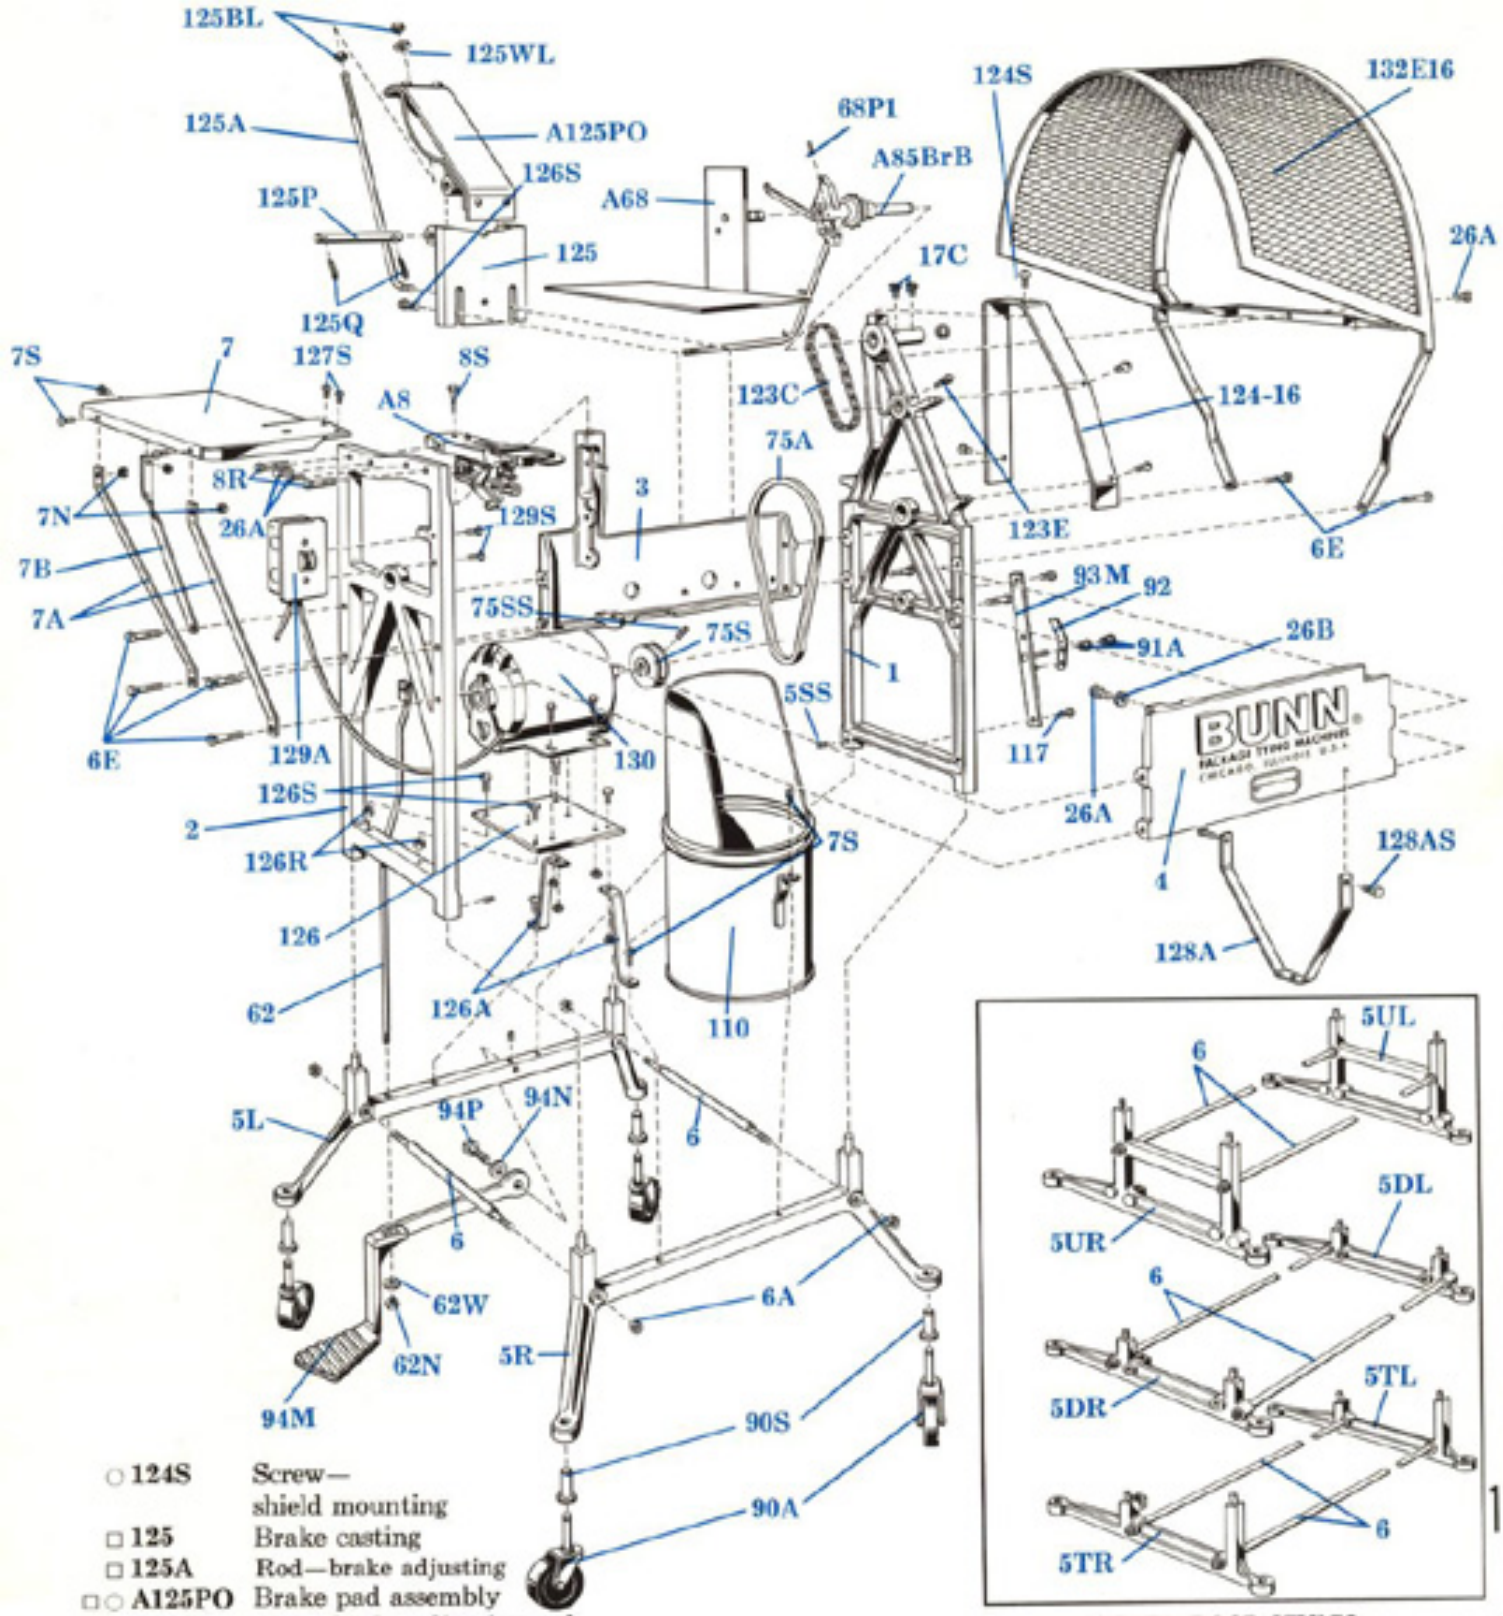


OTHER BASE STYLES

| | | | |
|---|---|---|---|
| ○ 124S | Screw—shield mounting | ○ 128A | Loop—regular twine can |
| □ 125 | Brake casting | ○ 128AS | Screw—loop mounting |
| □ 125A | Rod—brake adjusting | 129A | Cord set—regular, 8 ft. with switch |
| □ ○ A125PO | Brake pad assembly | ○ 129S | Screw—switch mounting |
| ○ 125BL | Nut—brake adjusting rod | ○ 130 | Motor—electric (give information from motor spec. plate) |
| ○ 125WL | Washer—brake adjusting rod | | |
| ○ 125P | Pivot—brake | 132E16 | Guard—expanded metal, 16" machine |
| ○ 125Q | Pin—brake pivot cotter | | |
| ○ 126 | Plate—motor | | |
| □ ○ 126A | Bracket—motor plate, reg. | | |
| □ ○ 126R | Riser—motor plate | | |
| ○ 126S | Screw—frame | | |
| ○ 127S | Screw—knotter standard | | |

○Used in post office models, too. Order may be written with "P.O." appended to part number.
□Must order with machine serial number. △Specify twine size used. ☆Used with backgeared models.